



Barbed Fence Mount

1. Bend zip ties on the ribbed side at ½” and 1” to create a hook.
2. Feed the zip tie through the holes in the back of unit.
3. Attach the 3D Post to desired location, zip tie until snug.




Tree Mount

1. Attach tree bracket to back of 3D Post
2. Screw bracket into tree.
3. Screw base into tree.



Fence/U-Channel Mount


1. Bend zip ties on ribbed side at ½” and 1” to create a hook.
2. Feed zip tie through the holes in the back of unit.
3. Create a loop in middle of 3D Post and slide down onto a fence or U-Channel post.
4. At desired location, zip tie until snug.

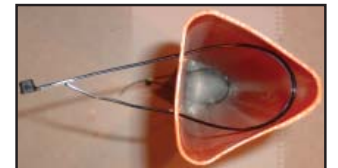


60” Stand Alone Mount

1. Place over a fence or U-Channel Post
2. Dig an 8” hole by 4” wide. Flare the 3D Post Grip flanges out and back-fill.

* Quick crete base for permanent placement.

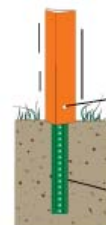

Slide It
Fence Post or
U-Channel

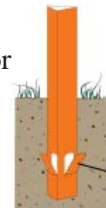

Bury It
3D Post-Grip
Anchor System

PLEASE NOTE: Sign your name on Non-Decal side with permanent marker

www.the3dpost.com